

## FA54 Logo to Camera Switch upon motion.

1. Verify Firmware version, this guide is for 9.20.1.1
2. Ensure Video Motion Detect 4 is running.  
Under Settings, and then the Apps tab, open VMD4 and ensure that it is running.

### AXIS Video Motion Detection



3. Setup output ports.  
Under Settings, then System tab, and then I/O Ports tile, ensure that Port 1 is setup as an Output, and Normally Open Circuit.

### I/O ports



4. Setup Event Rule

Add the event rule to make the logo switch to camera upon motion.

Under Settings, Settings tab, and then Event tile. In the dialog box that pops up, select Add. Set up the rule as shown in the screenshot, and then hit OK.

**AXIS FA54 Main Unit**

---

**Rules** Schedules Recipients Manual triggers

New rule

Use this rule

Name

Condition ^

Condition

Invert this condition

Use this condition as a trigger

Action ^

Action

Port

State

## 5. Output Rotation

If the video is displaying “upside down” on the monitor:

- Go to the “Settings” icon on the bottom of the display
- Go to “HDMI”
- Change the Output Rotation

## 6. Other Setting

- Go to the “Settings” icon on the bottom of the display
- Go to “Stream” TAB / H.264 encoding