

FA54 Logo to Camera Switch upon motion.

1. Ensure Video Motion Detect 4 is running.

Under Settings, and then the Apps tab, open VMD4 and ensure that it is running.

If VMD4 is not an option under Apps, update the firmware to 8.30 or 18+snapshot (for faceblocking enabled states)

AXIS Video Motion Detection



2. Setup output ports.

Under Settings, then System tab, and then I/O Ports tile, ensure that Port 1 is setup as an Output, and Normally Open Circuit.

I/O ports



3. Setup Event Rule

Add the event rule to make the logo switch to camera upon motion.

Under Settings, Settings tab, and then Event tile. In the dialog box that pops up, select Add. Set up the rule as shown in the screenshot, and then hit OK.

Action Rule Setup

General

Enable rule

Name:

Condition

Trigger: Start condition only

Active: Yes No

Schedule:

Additional conditions

Wait at least before re-running the rule (max 23:59:59)

Actions

Type:

Port:

Set state: Active Inactive

Duration

Go to opposite state when the rule is no longer active

Go to opposite state after

4. Output Rotation

If the video is displaying “upside down” on the monitor:

- Go to the “Settings” icon on the bottom of the display
- Go to “HDMI”
- Change the Output Rotation

5. Other Setting

- Go to the “Settings” icon on the bottom of the display
- Go to “Stream” TAB / H.264 encoding